MANUAL



S3 SCHUBERTH

4 – 47 **EN**

A. HOW TO USE THIS MANUAL CORRECTLY

Please take time to read through this manual carefully so that your helmet protects you properly when riding your motorcycle. In order to ensure that you do not overlook any aspect of the manual that is relevant to your safety, we recommend that you read it in the order in which it appears.

Please pay particular attention to:

A Caution:	safety instructions
🕐 Note:	advice
🕑 Tip:	practical tips

A Caution:

This helmet is not intended for use in the United States of America. The helmet has been inspected and approved to the European ECE Standard, therefore it does not comply to US regulations and requirements. It is only legal to use the helmet in countries in which the European ECE Standard is valid. Use in other countries does not entitle the user to make claims for compensation in the event of damage before the US courts or the courts of other countries not bound by the ECE Standard.

Note:

We reserve the right to make changes that reflect technical advances and to do so without express notice.

B. CONTENTS

A.	HOW TO USE THE MANUAL CORRECTLY	4
B.	CONTENTS	5
C.	THE HELMET	7
1.	Standard	7
2.	ECE approval	7
3.	Anatomy of the helmet	8
4.	Helmet shell	8
5.	Inner shell	9
6.	Aerodynamics and Aeroacoustics	9
7.	Additional wind deflector	11
8.	Chinstrap with Micro-Lock ratchet fastener	11
9.	Visor with anti-fog lensr	13
10.	Sun visor	19
11.	Inner lining	22
12.	Ventilation systems	28
13.	Additional safety features	30
D.	PUTTING ON THE HELMET AND TAKING IT OFF	31
1.	Putting on the helmet	31
2.	Taking off the helmet	31
E.	BEFORE EVERY JOURNEY	32
1.	Checking the helmet	32
2.	Checking the chinstrap	32
3.	Checking the visor and sun visor	33

B. CONTENTS

F.	FOR YOUR SAFETY	34
1.	Safety advice concerning the helmet	34
2.	Safety advice concerning the visor / sun visor	35
3.	Safety advice concerning modifications / accessories	36
G.	MAINTENANCE AND CARE	37
1.	Helmet shell	37
2.	Visor and sun visor	37
3.	Inner lining	39
4.	Ventilation	39
5.	Retention system	40
6.	Storing the helmet	40
Н.	ACCESSORIES AND SPARE PARTS	41
1.	Communication system	41
2.	Accessories and spare parts	43
3.	Ordering original SCHUBERTH parts	43
I.	SCHUBERTH service	44
J.	Warranty	45
K.	Environmental protection	46
L.	How to contact us	47

1. STANDARD

The S3 conforms to the ECE-R 22.06 standard. This testing norm guarantees conformity to defined safety standards in respect of shock absorption, visor, retention system and field of vision. The certification applies to all the countries of the European Union and all countries that recognise the ECE standard. It also guarantees conformity with all insurance requirements that are important in the event of a claim.

Please note that this S3 with ECE approval is not certified for the United States of America. It is only permitted for use in countries where the ECE standard is valid.


🕐 Note:

The only SCHUBERTH helmets that are legal to use in the United States of America are those with the appropriate approval and technical specifications. Further information and details of sales outlets for these helmets can be found on the internet at:

WWW.SCHUBERTH.COM

2. ECE-APPROVAL

Helmet

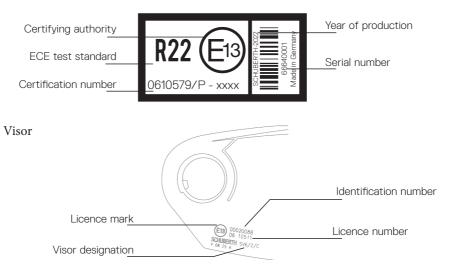


The following visors are approved for the SCHUBERTH S3:

Visor	
oloor	ciz

clear, size 1 and 2 dark smoke, size 1 and 2 HD yellow, size 1 and 2 Silver mirrored, size 1 and 2 Designation according to the approval

SV6/1/C | SV6/2/C SV6/1/D | SV6/2/D SV6/1/Y | SV6/2/Y SV6/1/S | SV6/2/S

3. ANATOMY OF THE HELMET

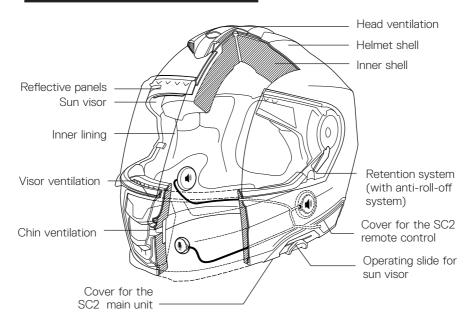

4. HELMET SHELL

The helmet shell of the S3 combines an aerodynamically optimal shape with consistent protection. It consists of a new fiberglass shell from our patented Direct Fiber Technology reinforced with carbon fiber for improved shock absorption strength and lighter weight.

A Caution:

The helmet is a safety device designed to absorb the effects of only one impact. The helmet have to be replaced after a fall, accident or any other impact.

5. INNER SHELL

For optimised shock absorption properties, the inner shell of the helmet consists of new EPS material. The complex multi-segment foam padding of the main body provides better absorption and dissipation of impact forces and gives you the highest level of safety. The large side panels ensure the helmet fit optimally and comfortably.

6. AERODYNAMICS AND AEROACOUSTICS

The S3 produces practically no uplift even at speed, Various features developed in SCHUBERTH's wind tunnel make the helmet notably quiet as far as aeroacoustics are concerned, while providing optimized hearing capability when riding. This enhances concentration, especially at high speeds.

🕐 Note:


Aeroacoustics values may vary according to the type of motorcycle, fairing design, seat position and physical size of the rider.

A Caution:

As a result of the aeroacoustics optimization of the helmet (and the lower wind noise inside the helmet that comes with it), your actual speed can easily be underestimated. Please do not rely on your sense of hearing to estimate your road speed - always check it using your speedometer.


🕐 Note:

With faired motorcycles, strong currents occur at the edges of the wind shadow. These may significantly reduce the aeroacoustic performance of the helmet. The motorcycle fairing should be adjusted so that the turbulence created does not reach the bottom surface of the helmet.

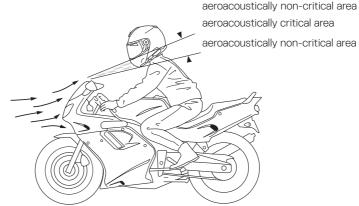

Turbulators


The patented turbulators on the top of the visor also optimise the aeroacoustic properties when riding and prevent acoustic disturbances in the form of whistling sounds that can be created by smooth and straight edges.

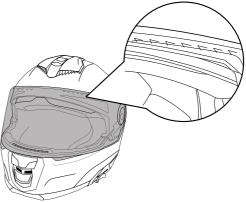

7. ADDITIONAL WIND DEFLECTOR

The additional wind deflector prevents the unpleasant effect of the wind created as you ride flowing into the helmet. In addition, the riding noise in the helmet is reduced.

The wind deflector is attached by Velcro strips on the inside of the acoustic collar and can be removed when required to provide an additional flow of fresh air, especially in hot weather.

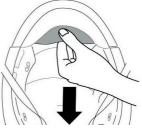

Tip:

The fit of the bottom of the helmet is extremely important in ensuring that the helmet is as quiet as possible. If you have a smaller neck size, we recommend that you also wear a scarf.

8. CHINSTRAP WITH MICRO-LOCK RATCHET FASTENERS

The S3 is fitted with a ratchet strap. This locking system is easy to use and enables you to adjust the chinstrap perfectly to your head every time you put the helmet on.

ADJUSTING THE CHINSTRAP

The length of the chinstrap is adjusted by increasing or reducing the length of strap pulled through the metal buckles. Adjust the length of the chinstrap so that it fits firmly but comfortably under your chin.



ΕN

🕑 Tip:

Both chin straps are adjustable in length.

A Caution:


When adjusting the strap, make sure that the helmet cannot be pulled off in a forward direction with the chinstrap closed.

A Caution:

Check the adjustment of the chinstrap length at regular intervals.

OPENING AND CLOSING

To close the chinstrap fastener, slide the ratchet tongue step by step into the locking buckle. If you find that the chinstrap fits too loosely around your chin, slide the ratchet tongue one step further into the locking buckle. When adjusting the chinstrap, make sure that it rests firmly but not uncomfortably around your chin. To open the chinstrap, pull the red ribbon on the ratchet fastener upwards to release the locking buckle (1). Then pull the ratchet tongue out of the locking buckle (2).

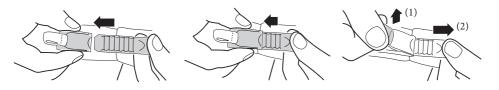



Never ride without making sure that the chinstrap is correctly fastened and adjusted and properly positioned. If the chinstrap is not correctly adjusted or fastened, the helmet could be displaced in the event of an accident.

A Caution:

Never open the chinstrap while riding.

9. VISOR WITH ANTI-FOG LENS

The visor is a fog-free double-lens visor. By fixing the inner anti-fog lens using eccentric pins, the two visor panes are pre-tensioned together and are thereby sealed. An insulating air cushion is thus formed between the visor's main plate – i.e. the outer plate – and the inner plate, which prevents any fogging up of the inner plate.

COATING

The main visor has an anti-scratch coating.

A Note:

The helmet should never be used to hold gloves or any other objects as this may damage the scratch-sensitive anti-fog lens.

A Note:

The anti-fog lens is supplied with a protective film. Remove this film before using the helmet for the first time.

A Note:

The visor is supplied with a protective foil. Remove this foil before using the helmet for the first time.

OPENING THE VISOR

To open the visor, use your thumb to push the visor up using one of the finger tabs situated to the left and right of the visor, and move it to the desired position.



VISOR (INCLUDING CITY POSITION)

The second position (city position) locks in place more firmly, providing greater resistance when the visor is in this position. This makes it easier to lock the visor in the city position, especially while riding.

Open the visor for this purpose

- \cdot the city position is usually skipped
- but it is easy to find this position by moving it downwards again. The visor mechanism requires no additional lubrication. The visor can be operated at any time irrespective of the position of the sun visor.

CLOSING THE VISOR

To close the visor, grip the finger tabs at top left and right and press the visor down with one movement until it audibly locks into place.




REPLACING THE VISOR


Changing the visor is easy to do without tools using the convenient EasyChange mechanism. To replace the visor, it is helpful to place the helmet on a flat surface or on your lap while seated.

Removing the visor

1. Move the visor into the highest locked position.

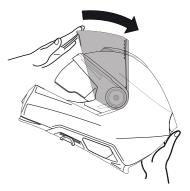


2. Operate the spring elements on the right and left below the visor mechanism in the direction of the visor opening. Move the visor back until it is released from the visor mechanism.

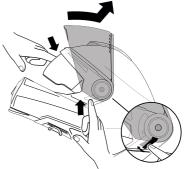


Installing the visor


1. Using both hands, guide the visor locking studs into the respective recesses in the visor mechanism.

2. The visor will then audibly lock into place when you press it gently towards the helmet with a simultaneous closing movement.

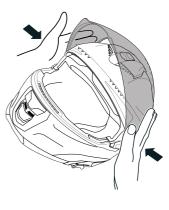

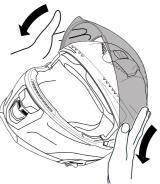


 Check the function of the visor mechanism by closing the visor once and opening it as far as possible.

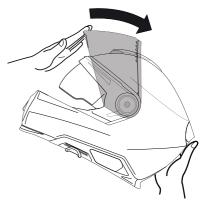

ANTI-FOG LENS

Removal


- **1.** Before starting to remove the antifog lens, first lay the visor on a soft, clean cloth so that its top edge is facing you.
- 2. To reduce the pretensioning of the antifog lens slightly if necessary, use the balls of your thumbs to carefully bend the visor sufficiently apart while applying pressure with your thumbs to release the anti-fog lens and move it approx. 2–3 mm forward.
- **3.** Now grip the back of the anti-fog lens with your index and middle fingers and lift it off the visor. In this position you can easily remove the anti-fog lens from the locking pin with your thumb.
- **4.** You can now remove the anti-fog lens from the visor.

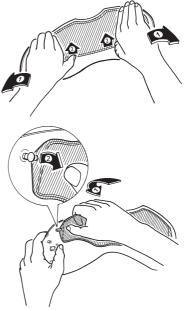



Fitting

- 1. Remove the visor from the helmet.
- 2. Use the notch to help position one side of the anti-fog lens on one of the eccentric holding pins. Make sure that the silicone seal is facing the visor.

- Carefully bend the visor just enough that the notch is guided onto the other eccentric holding pin on the opposite side of the anti-fog lens. To do this, you will need to bend the end of the anti-fog lens into a slight S-shape.
- **4.** Checking the correct application of the anti-fog lens, by trying to slide a piece of paper between the visor and the anti-fog lens. In case it gets between the two, please follow point 5.
- 5. In case of needs, it is possible to regulate the pressure on the seal by adjusting the eccentric locking-pins. To do so, remove the anti-fog lens, then use a flat object with no sharp-edges to push the locking pins out of the face shield carefully from the inside; then rotate them by 180° and reinsert them. Fit the anti-fog lens and check the seal.

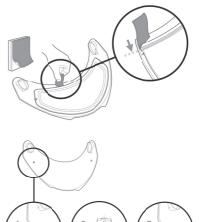

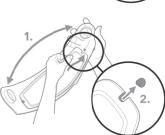

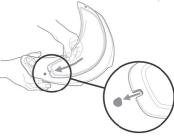

EN

O Note:

To avoid scratching the visor, never remove or fit the anti-fog lens unless the visor unit is clean and dry.

When fitting the anti-fog lens, check that neither dust nor moisture are able to get between the two surfaces.

When removing or fitting the anti-fog lens, it is always best to lay the visor unit on a clean, dry cloth.

O Note:

In view of the strong air pressure acting when travelling with an open visor, we recommend riding with a closed visor at all times to prevent any dirt or moisture from getting inside the helmet.

Note:

To push out the locking pins, use a flat object with no sharp-edges.

A Caution:

As a result of the double lens structure, there is a possibility of greater light reflection in the face schield, especially when riding at night. As a rule, such light reflection is regarded as uncritical due to the absence of fog with this type of visor. However, if this light reflection should cause you difficulties – because of particular sensitivity to it, for example – you should refrain from using the anti-fog lens.

A Caution:

If moisture is present in or has penetrated the airtight area between the two plates, you should remove the anti-fog lens immediately in order to prevent any interference with visibility. Do not re-fit it until both plates are completely dry (we recommend air-drying). If you should subsequently detect any further penetration of moisture, the anti-fog lens should not be used on any account and must be replaced.

Safety note

Check before each journey that the visor and sun visor mechanism are functioning correctly and that the visor and sun visor will provide good visibility. Any dirt should be removed before setting off. Check the visor and sun visor for physical damage and cracks. Severely scratched or scuffed visors will seriously impair visibility and should be replaced before setting off on a journey.

A Caution:

Petrol, solvent and fuel vapors can cause cracking of the visor. Make sure that the visor is never exposed to such vapors! Never place the helmet on the tank of your bike.

10. SUN VISOR

SUN VISOR

The sun visor has a scratch-resistant coating and uses a special polycarbonate to ensure effective protection against harmful UV radiation.

Operation

The sun visor is operated by means of the slide positioned on the left in the chin area, which is easy to use even when wearing gloves. Moving the slide towards the back lowers the sun visor, moving it forwards retracts the sun visor inside the inner helmet shell and locks it in position.

The sun visor can be operated irrespective of the position of the visor.

The maximum opening position of the sun visor can be set using the limiter. The limiter is on the running edge of the sun visor slider.





🕐 Note:

Only use the slide to operate the sun visor.

A Caution:

Never ride in the dark or in conditions of poor visibility with the sun visor down. Always raise the sun visor before entering a tunnel.

A Caution:

Riding without the visor or with an open visor can result in injury to the eyes and face from stones, dust, insects and other flying objects. The sun visor, when lowered, will offer a certain amount of protection from light impact from stones or insects but does not provide protection against all hazards.

REPLACING THE SUN VISOR

The sun visor can be replaced without tools.

🕑 Tip:


To avoid fingerprints and scratches, use a soft, clean cloth (we recommend a microfibre cloth) to hold the sun visor when removing or installing it.

🕐 Note:

Try to prevent the sun visor coming into contact with the helmet's inner shell when removing or fitting it.

Removing the sun visor

- **1.** Move the sun visor down.
- Hold the sun visor with one hand and press the latch backwards until it disengages. Repeat this step on the other side.

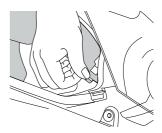


- **4.** Press the retaining element inwards out of the sun visor. Repeat this step on the other side.
- **5.** Move the slider of the sun visor slightly forward.
- **6.** Press the sun visor inwards on both sides and remove it downwards.



Fitting the sun visor

- **1.** Bring the slider of the sun visor to the three-quarter position.
- **2.** Slide the sun visor behind the the latch. Repeat this step on the other side.
- **3.** Hold the sun visor with one hand and with the other hand push the slider backwards.

- Press the latch forward with your fingers until it clicks into place. Repeat this step on the other side.
- **5.** To be on the safe side, make a functional check of the sun visor operating mechanism.

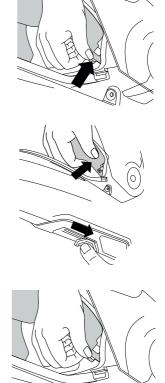

11. INNER LINING

The interchangeable, washable and seamless inner linings of the S3 ensures a secure and comfortable fit, as well as improved helmet ventilation.

The high-comfort cheek pads ensure that the helmet fits comfortably around the cheeks, and the head pad provides an optimal fit all around the head. The head pad sits comfortably on the head without covering the ventilation channels.


The internal lining consists of skin-friendly materials throughout, particularly in areas that come in contact with the head. A soft, breathable material known as Interpower®, which is fast-drying and conducts heat efficiently is used for the padding, as well as a special anti-bacterial low-odour fabric.

Thanks to the new SCHUBERTH individual program you have the possibility to optimize the fit of the helmet. For this purpose, we offer different head and cheek pads. For more information please visit our website www.schuberth.com.

REMOVING THE INNER LINING

Removing the cheek pad

- 1. Open the chin strap.
- 2. Detach the cheek pad by pulling it out of the lower trim, starting from the back of the helmet followed by the front.
- **3.** Pull the chin strap out of the cheek pad pocket.

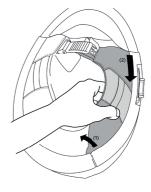


- **4.** Pulling the three pins out of the corresponding plug-in devices.
- **5.** Repeat step 2 to 5 to remove the cheek pad on the other side.

Removing the head pad

1. Loosen the pins of the forehead padding and pull it out of the 4 holders.

2. Loosen all 4 pins of the upper head pad as well as the 2 pins of of the left and right side pads.


3. For the side pads, loosen the 2 pins and the velcro connection to the EPS.

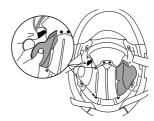






4. Loosen the back pins of both the cheek pads and the two pins of the head pad back to free it.

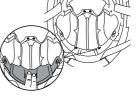

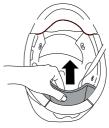

Removing the neck pad

1. Pulling the neck pad in order to free the eyelets by the two pins.

INSTALLATION INNER LINING

Installation the head pad

- **1.** Connect the 4 pins of the head pad with the corresponding plug-in devices.
- 2. Fasten the forehead pad to the 4 holders and connect the pins with the corresponding plug-in devices.





3. The back pad is linked to the helmet with the plug-in devices held by the cheek pads. to install it is necessary to install the cheek pads as well.





1. Slide the chin strap through the cheek pad pocket.

- **2.** Connect the pins of the cheek pads with the corresponding plug-in devices.
- **3.** Insert the front bayonet of the cheek pad over the pin, located inside the lower trim, and successively push the rear of the cheek pad to snap the eyelet over the pin.

4. Repeat points 1 to 3 for the installation of the cheek pad on the other side.



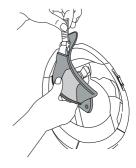

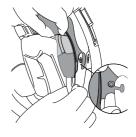






Installing the neck pad

1. Pushing the neck pad in order to to snap the eyelets over the two pins.

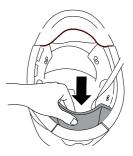



Ensure that the A.R.O.S. straps are not twisted.

A Caution:

Never ride when parts of the inner lining have been removed.

A Caution:

Excessive heat (e.g. exhaust heat) can cause damage to the inner lining!

O Note:


To avoid damage to the inner lining and inner shell, do not hang the helmet over the mirrors or handlebar grips.

S.R.S. - SCHUBERTH RESCUE SYSTEM

S.R.S. - SCHUBERTH RESCUE SYSTEM is a safety mechanism realized to support the emergency services. The cheek pads can be safely removed by pulling on the 2 lashes and reducing the forces applied to the rider's neck, facilitating the removal of the helmet

- In case of emergency, before any action, ensuring the helmet is firmly hold and, only after that, cut or remove the chin strap.
- 2. While holding the helmet firmly, grab the ribbons pulling them in order to release the neck pad part cheek pads out of the lower trim.
- **3**. While holding the helmet firmly, ensure the cheek pads pockets are free of the chin straps or part of them.
- **4.** While holding the helmet firmly, grab the cheek pads and pull them down to release them from the snaps inside the helmet.



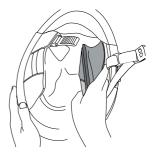

A Caution:

S.R.S. is an emergency services support. Do not use the emergency ribbons while riding. Do not use the emergency ribbons to remove the helmet.

12. VENTILATION SYSTEMS

VENTILATION SYSTEM 1 - VISOR SETTING

The S3 has a visor that adjusts to several positions. Depending on your road speed and the tendency of the visor to mist up, open the visor sufficiently wide to stop it from misting up but so that it still protects your eyes from excessive draft.

City position

In the second locking position, the visor is automatically in city position. Air entering through the bottom gap flows over the inside of the visor and escapes through the opening at the top.

VENTILATION SYSTEM 2 - VISOR VENTILATION

The S3 features an air inlet in the chin bar for visor ventilation. Air flows through the open air inlet regardless of riding position. A deflector ensures that the air current ventilates the visor effectively even at low road speeds. Press on the ventilation unit to open or close the air inlet.



VENTILATION SYSTEM 3 – CHIN VENTILATION

The chin ventilation provides centered air supply. The incoming air is cleaned with a dust filter as well. The chin ventilation can be opened and closed by moving the slider up or down.



🕑 Tip:

The dust filter can be cleaned or replaced if necessary.


VENTILATION SYSTEM 4 – HEAD VENTILATION

There is a large air inlet cowl with a threestage adjustable ventilation system on the top of the helmet shell for ventilating the top of your head. Air entering the helmet through this inlet cowl is directed via channels to the top of the head. Inside the helmet, the head padding system enables direct contact between incoming air and the surface of the head, thereby conducting the heat away from the inside of the helmet quickly. To regulate ventilation, the air inlet cowl is easily operated while wearing gloves. Push the air inlet cowl back to the first latch position for partial ventilation. To open the inlet fully, push the air inlet cowl further back.



SUMMER AND WINTER ADJUSTMENT FLAPS

The ventilation of the S3 can also be adjusted to suit the seasons, weather conditions or your personal preferences. While you will prefer the cooling air current to flow directly on to your head in summer in autumn/winter you can reduce the volume of incoming cold air, or divert it, by covering the ventilation channels with the flaps of the head pad. To do so, raise the head pad and fold out the fabric flaps located behind the front section.

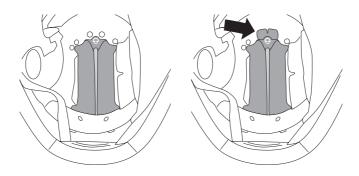

VENTILATION SYSTEM 5 - INTERIOR AIR EXTRACTION

The S3 is equipped with an innovative air extraction system. Fresh air flowing in through the head vent is directed via the air channels in the inner shell to the back of the helmet. The reduced pressure that prevails at the back of the helmet ensures that the air is constantly sucked out through the air vents and special netting material fitted to the neck pad, thus guaranteeing a pleasant climate inside the helmet.



13. ADDITIONAL SAFETY FEATURES

REFLECTIVE PANELS

Black reflective patches on the neckroll and forehead area make the motorcyclist more visible. With solid-colour helmets (no decals) the SCHUBERTH logo on the back and the SCHUBERTH lettering in front of the helmet are also made of reflective foil. In addition, there is a reflective application on the wind deflector, which provides better visibility when driving with the open chin bar.

🕐 Note:

Keep the reflective safety areas clean.

O Note:

When riding in France, local law requires that further reflective safety stickers be attached to the front, back and both sides of the helmet.

Note:

Please note the information on the handling of the chin strap.

D. PUTTING THE HELMET ON AND TAKING IT OF

1. PUTTING ON THE HELMET

- 1. Make sure the sun visor is retracted into the helmet shell.
- 2. Open the chinstrap and chinstrap comfort pad.
- **3.** Pull apart the lower ends of the chinstrap.
- 4. It will now be easy to put the helmet on.
- 5. Fasten the chinstrap and the chinstrap comfort pad.
- 6. Make sure the chinstrap passes under the chin and fits snugly.

2. TAKING OFF THE HELMET

- 1. Make sure the sun visor is retracted into the helmet shell.
- 2. Open the chinstrap.
- **3.** Grasp the ends of the chinstrap and pull the chinstrap ends apart.
- 4. The helmet can now be removed easily from the head.

Tip:

To avoid scratching any objects you might place the helmet on, we recommend closing the chin-strap after you have taken the helmet off.

E. BEFORE EVERY JOURNEY

For your safety, check the following points before every journey:

1. CHECKING THE HELMET

Check the helmet regularly for damage. Small superficial scratches will not impair the protective function of your helmet. In the case of more serious damage (cracks, dents, flaking and cracking paint, etc.), the helmet should no longer be used.

2. CHECKING THE CHINSTRAP (WITH HELMET ON AND FASTENED)

- 1. Check that the chinstrap passes under your chin.
- 2. Slip your index finger under the chinstrap and pull.

If the chinstrap is loose under the chin, it is too long and needs to be tightened.

If the chinstrap loosens when you pull it, it is not properly fastened. Undo the chinstrap completely and try fastening it again. Repeat the test.

3. If you are unable to fasten the chinstrap so that it fits snugly against the chin, check that your helmet is still the right size for you.

Note:

Repeat the test after each adjustment.

A Caution:

Never ride with the chinstrap unfastened or incorrectly adjusted. The chinstrap should fit correctly and should not become loose when pulled. The fastener is not correctly closed if the chinstrap becomes loose when pulled.

E. BEFORE EVERY JOURNEY

3. CHECKING THE VISOR AND SUN VISOR

Before every journey, check that the mechanisms of the visor and sun visor are working properly and that the visor and sun visor will provide sufficiently clear visibility. Any dirt should be removed before riding.

Check the visor and sun visor for physical damage and cracks. A badly scratched visor will considerably impair your vision and should be replaced before setting off on a journey.

A Caution:

Never use tinted visor or sun visor in conditions of poor visibility, when riding at night or in a tunnel.

A Caution:

Stop riding if visibility is poor.

F. FOR YOUR SAFETY

1. SAFETY ADVICE CONCERNING THE HELMET

▲ Motorcycling is associated with particular risks and dangers for the rider and passenger. Wearing a helmet can reduce but not eliminate the risk of serious injuries. It is impossible to state precisely what the protective effect of a helmet will be in the event of an accident. Safe riding techniques, adapted to the particular road and weather conditions, are essential for your safety.

▲ To provide adequate protection, the helmet must fit well and be securely fastened.

Always fasten the chinstrap before setting off and check that the fastening system and strap are correctly in position.

▲ Never ride with the chinstrap unfastened or incorrectly adjusted. The chinstrap must be correctly positioned and must not come loose when pulled. The fastener is not correctly closed if the chinstrap becomes loose when pulled.

▲ The full protective function of a helmet can no longer be guaranteed after an accident or impact. Like the crumple zone of a car, the impact energy of a collision is absorbed by complete or partial destruction of the structure of the outer and/or inner shell of the helmet. Because of the way helmets are designed, this damage is rarely visible from the outside. The safety helmet is designed to absorb only one impact. It is therefore essential to replace the helmet after a fall, accident or other violent impact. For safety reasons, the old helmet should be rendered unusable.

▲ The helmet safety mechanism described above can also cause small cracks in the shell when the helmet is dropped from a small height (less than 1 meter).

Any helmet that has been subjected to a violent impact should be replaced.

▲ No helmet provides absolute protection from all conceivable impacts. This helmet has been specially developed for motorcycle riding and is unsuitable for other purposes.

F. FOR YOUR SAFETY



A Examine the helmet for damage at regular intervals. Small scratches will not impair the protective function of your helmet.

A The helmet should be replaced after 5 to 7 years, depending on use and care. Although the outer shell is in principle capable of a longer service life, the occurrence of material fatigue and wear to other components, as well as the overall action of the helmet and the unknown conditions in which the helmet has been used, make it advisable for your own safety to replace

the helmet after this period of use.



A Excessive heat (e.g. exhaust heat) can cause damage to the decoration, the inner shell of the helmet and the interior lining.

A Direct contact with motor fuel, thinners or solvents can destroy the structure of the inner and outer shell. Make sure the helmet does not come into contact with such substances, even for cleaning purposes.

A Do not apply paint, stickers, petrol or other solvents to this helmet.

2. SAFETY ADVICE CONCERNING THE VISOR/ SUN VISOR

A The protective film used during shipping should be removed before use.



A The anti-fog lens is supplied with a protective film. Remove this film before using the helmet for the first time.

Any scratches and/or dirt arising from the use of the visor and/or sun visors significantly impair your vision in any driving situation and thus increase the risk of an accident. For your own safety, replace them or clean them immediately.



A Never use a tinted visor with marking "daytime use only" in conditions of poor visibility, at night or in a tunnel!



A Benzine, solvent and fuel vapor can cause cracks in the visor. Keep the visor away from such vapors and do not allow these kinds of substances to come into direct contact with the visor! Never place the helmet on the tank of your motorcycle.



A Make sure the visor is always in perfect condition. Don't ride when visibility is poor!

F. FOR YOUR SAFETY

3. SAFETY ADVICE CONCERNING MODIFICATIONS/ ACCESSORIES

A Original components (in particular on the outer shell, inner shell and restraint system) should not be altered or removed. The fitting of additional parts from other manufacturers that have not been recommended can reduce the protective effect and renders the ECE certification and all warranty and insurance claims invalid.

A Use only original parts, replacement parts and accessories that SCHUBERTH has expressly approved for your helmet!

A Use of an unapproved visor will void the helmet approval.

1. HELMET SHELL

To clean the helmet shell, you can use water, soap or one of the commonly available motorcycle shampoos, cleaners, polishes, plastic cleaners or cleaning fluids. Using water and soap is usually sufficient. Make sure when using the other cleaning materials that these do not come into contact with the visor, since they can cause damage to the visor and its coating.

O Note:

Never use motor fuel, thinners or solvents to clean the helmet. These substances can cause serious damage to the helmet with no external signs. The full safety function of the helmet can then no longer be guaranteed.

2. VISOR AND SUN VISOR

OUTER SURFACE OF THE VISOR

Use a soft cloth and a mild soap solution (< 20 °C) to remove dirt from the outside of the visor. To dry the visor, use a lint-free cloth and apply gentle pressure.

ANTI-FOG LENS

The anti-fog lens must only be cleaned with a soft cloth, which may be slightly dampened if required (we recommend a microfibre cloth). Do not use any cleaning agents.

SUN VISOR

The sun visor should only be cleaned with a soft and, if necessary, slightly damp cloth (we recommend a microfibre cloth). Do not use any cleaning agents.



Only use tepid

Only use tepid water (< 20 °C) for cleaning. Never on any account clean the visor or sun visor with petrol, solvent, a window or glass cleaner or other cleaning agents containing alcohol.

Note:

The visor should not be soaked in water even if it is very dirty on the outside, as this will severely reduce the surface hardness and thus the durability of the anti-fog/anti-scratch coating.

🕐 Note:

The visor should not be completely closed when not in use (particularly during periods of storage), as the moisture contained on the inside cannot escape if closed and will largely be absorbed by the anti-fog/anti-scratch coating. This can lead to a reduction in the lifespan of the coating. Ideally, position the visor in the third locking setting above the city position.

🕐 Note:

Never attach labels, adhesive tape or stickers to the visor or sun visor.

🕑 Tip:

Stubborn soiling on the outside of the visor (e.g. dried-on insect residue) is easy to remove if you cover the closed visor with a damp cloth for a few minutes to soften the deposits. Repeat this procedure if required.

🕐 Note:

Always avoid temperatures above 40 $^{\rm o}{\rm C}$ and high humidity when choosing a place to store the visor, as these conditions can cause damage to the visor.

3. INNER LINING

The inner lining of the S3 can be removed completely. The neck pad, head and cheek pads can be washed by hand using a mild soap solution (e.g. with highly diluted standard mild detergent) at a maximum temperature of 30 °C. Allow the lining to dry at room temperature and with good ventilation.

4. VENTILATION

VENTILATION COWL

When necessary, the head ventilation system's air inlet cowl can be removed to clean the ventilation mechanism and ventilation grille.

1. Grab slightly into the front opening of the head ventilation hood.



2. Push it up and to the front side until the ventilation hood is released from the helmet shell

- **3.** After cleaning, attach the ventilation hood by placing it on the bracket and pushing it downward under slight pressure until it clicks into place.
- **4.** To ensure optimum ventilation, operate the ventilation slide.

5. RETENTION SYSTEM

The components of the retention system do not require maintenance.


6. STORING THE HELMET

Store the helmet in the helmet bag supplied in a dry, well-ventilated and stable place. Always position the helmet so that it cannot fall to the floor. Damage that occurs in this way is not covered by the warranty.

Note:

Store the helmet out of the reach of children and animals.




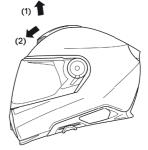


H. ACCESSORIES AND SPARE PARTS

1. COMMUNICATION SYSTEM

Your S3 comes with pre-installed HD speakers, HD microphone and 3 antennas for Bluetooth Intercom, Mesh Intercom and FM Radio - ready for the use of the brand new SC2 communication system.

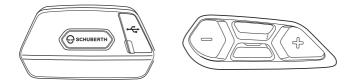

The HD speakers are behind the cheek pads.

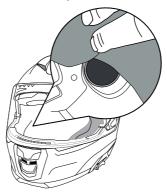

The HD microphone is preinstalled and located behind the chin bar.

You can find out more about the SC2 System from your specialist dealer and at **WWW.SCHUBERTH.COM**

H. ACCESSORIES AND SPARE PARTS

A Caution:

The installation of a communication system (including basic headsets) constitutes a modification to the helmet. For this reason it is necessary for any communication system and headset intended for installation into a specific model of helmet to be tested and approved in line with the ECE-R 22.06 European helmet standard, otherwise the helmet's approval and compliance with insurance requirements become invalid on installation.

Evidence of approval in line with ECE-R 22.06 in connection with a specific communication system is only valid if certified by an official regulatory office of an EU member state. Any other form of information from these or other institutions (e.g. on the general suitability of communication systems for use in motorcycle helmets) is of no relevance and the helmet will lose its approval.


2. SCHUBERTH INDIVIDUAL PROGRAM

To develop the inner linings of the S3 SCHUBERTH used a scientific approach commissioning a Study to the "HOHENSTEIN INSTITUT FOR TEXTILINNOVATION". The result is an interior that optimally fits head shapes from round to oval, which make up more than 98% of the population. SCHUBERTH's claim is to offer everyone a perfect fit. That's why the SCHUBERTH individualization concept was introduced with the S3, allowing the fit to be customized.

In the case of an extremely oval head shape, you have the option of adjusting the head padding by installing thicker side pads and thinner back padding. In the case of an extremely round head shape you can use thinner side pads and a thicker back pad. This head pad customization is available for the sizes M to XL.

For all sizes, we also offer the option of optimizing the fit in the cheek area with two different cheek pads. The "Sport" cheek pads provide a more aggressive and stable fit and the "Comfort" cheek pads provide a softer and loose fit.

H. ACCESSORIES AND SPARE PARTS

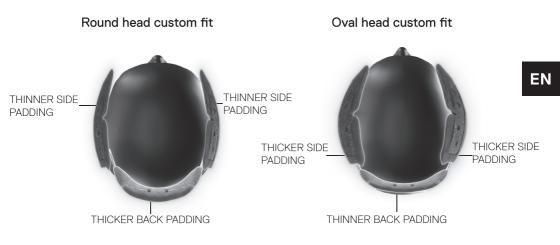

For further information on the SCHUBERTH individual program, please visit our website **WWW.SCHUBERTH.COM**.

3. ACCESSORIES AND SPARE PARTS

An overview of all available accessories and spare parts can be found on the Internet at **WWW.SCHUBERTH.COM**

We recommend that you only use original SCHUBERTH accessories and spare parts for your SCHUBERTH helmet as they are specially adapted to your helmet model.

A Caution:

For safety reasons, all other parts of the helmet should only be replaced by your specialist dealer.

4. ORDERING ORIGINAL SCHUBERTH PARTS

Please contact your specialist dealer for original SCHUBERTH accessories and replacements. To find your nearest SCHUBERTH specialist dealer, please go to **WWW.SCHUBERTH.COM**

I. SCHUBERTH SERVICE

Please contact your dealer if necessary, or you can call our service center directly. Find your local dealer as well as the contact details for our service center on the SCHUBERTH website at **WWW.SCHUBERTH.COM**

J. WARRANTY

Please check your statutory warranty entitlement in your country.

You can also enjoy the benefits of the "5 YEARS SCHUBERTH STANDARD GUARANTEE". Register your S3 on the internet at **WWW.SCHUBERTH.COM** within 6 months from the purchase of the helmet to enjoy the privileges of your extended guarantee.

Should there be a problem with your product, please contact your dealer directly or through his service address, or you can call our service centre directly. If you return the product, please provide an accurate description of the fault. Please enclose a copy of your receipt if you have not yet registered for the "5 YEARS SCHUBERTH STANDARD GUARANTEE".

You can register your helmet following this QR-Code:





You will find the serial number on your ECE label (check the helmet Quick Start Guide leaflet to identify where it is located)

K. ENVIRONMENTAL PROTECTION



The symbol of the crossed-out trashcan indicates that this electrical or electronic equipment must not be disposed of with household waste at the end of its service life, but must be taken for separate collection. There are free collection points for waste electrical and electronic equipment in your area and, if necessary, other collection points for the reuse of the equipment. You can obtain the addresses from your city or local government. If the old electrical or electronic equipment contains personal data, you are responsible for deleting this data by yourself before returning it. If possible, please remove old batteries or rechargeable batteries from the old device before returning it for disposal. Please avoid the generation of waste from electrical or electronic equipment as much as possible, e.g. by giving preference to products with a longer service life or by reusing old electrical equipment instead of disposing.

L. HOW TO CONTACT US

HEADQUARTERS

Phone

+49 (0)391 8106-0

Address

SCHUBERTH GmbH Stegelitzer Straße 12 39126 Magdeburg Germany

Internet

WWW.SCHUBERTH.COM

E-mail

info@schuberth.com

EN



Änderungen vorbehalten. Keine Gewährleistung auf Irrtümer und Druckfehler. Subject to change. Not responsible for mistakes or printing errors.



WWW.SCHUBERTH.COM