



OptiMate test TS120 Battery and charging system / alternator tester

The 3 Step TEST! Checks battery charge level.
Records lowest start volts. Verifies charging voltage.
Checks if alternator is compatible with LiFePO4 / LFP
Lithium batteries
Microprocessor accuracy. Easy to follow instructions
on rear panel of the tester. Easy to use! Connect clips
to the battery, then:

- 1) *Check battery charge level.* A low battery cranks (starts engine) poorly.
- 2) *Start engine.* OptiMate TEST records and indicates (for 20 sec) the lowest start volts.
- 3) With engine running, *verify charging voltage* from alternator and voltage regulator.

