 
SCREAMER7 INSTRUCTIONS

CAUTION: Loud Siren

- Please avoid close proximity to your ears. The extremely loud alarm will damage your hearing if held close to your ears
- Do not let children play with this alarm lock
- Do not use near pets

User Instruction:

- 1. Insert the key into the key barrel and rotate clockwise, the key barrel will spring out.
- 2. Slide the lock into your motorcycle's front or rear brake disc.
- 3. Locate a hole in the brake disc that will allow the locking pin to pass through and push the key barrel down and turn anti-clockwise to lock up.
- a. Brake disc thickness less than 6mm (1/4").
- b. Brake disc has hole whose diameter larger than 6mm (1/4").



Note:

The locking pin can pass through ANY hole on brake disc (See those dark areas on the diagram).

- 4. The lock will give a single beep sound. You then have 15 seconds to press the button to activate the alarm.
- 5. After activation, the lock will give a loud warning tone.
- 6. If the lock position is changed or if the lock is attacked, the siren will emit 4 beeps as a warning and then emit a loud siren for 10 seconds. If the lock is left alone it will re-set and re-arm.
- 7. To turn off the siren when in alarm mode, insert the key into the key barrel and rotate anticlockwise to unlock.















