SENA



SRL-EXT

MOTORCYCLE MESH & BLUETOOTH® COMMUNICATION SYSTEM FOR SHOEI HELMETS

——— SOUND BY ———

harman/kardon

Downloadable Sena Software

Download the SENA MOTORCYCLES App on Google Play Store or App Store.



SENA MOTORCYCLES

• Device Configuration Setting

Download the following items at sena.com.



Firmware



- Sena Device ManagerFirmware upgrade
- Device configuration setting




Quick Start Guide, User's Guide

Follow us on Facebook, YouTube, Twitter and Instagram to check the latest information and helpful tips.



SENA Technologies, Inc.Customer Support: **sena.com**

■ Product Details

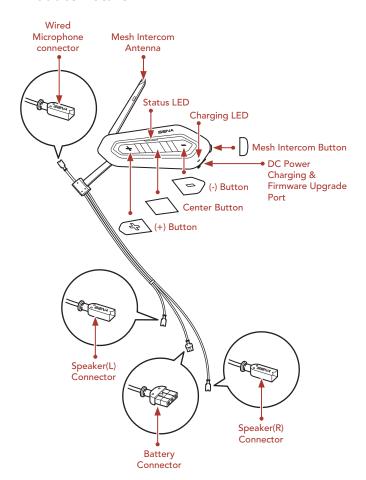



Installation


The SHOEI's RF-1400 Helmet is compatible with the SRL-EXT.

The model name of the **RF-1400 Helmet** varies depending on the region.

- RF1400(US), NXR 2(EU), Z-8(JP)
- For more information about installation, refer to the User's Guide.

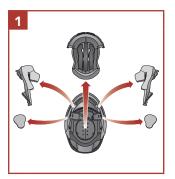


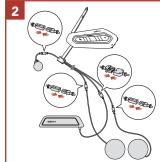

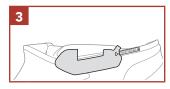







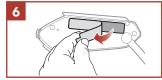







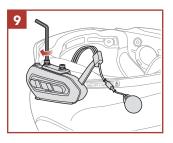

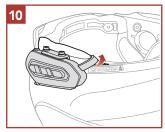


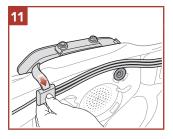





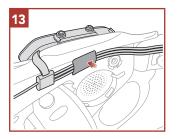




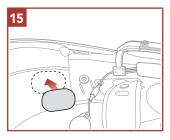


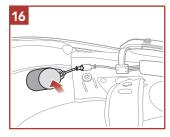


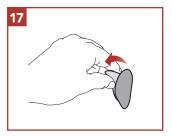



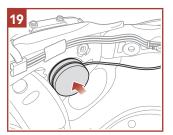


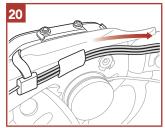


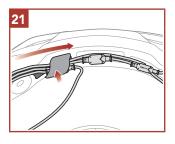








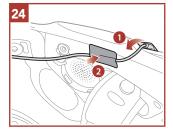


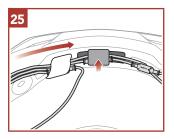


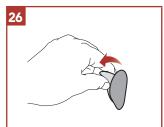

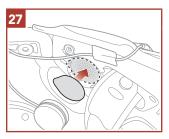

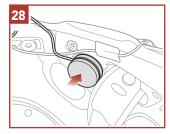

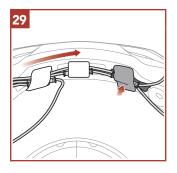

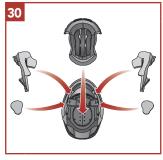

■ Mesh Intercom Antenna

Pull the Mesh Intercom Antenna inwards slightly to unfold it.



Icon Legend



Tap button the specified number of times



Press and Hold button for the specified amount of time



"Hello"

Audible prompt

Basic Operations

Powering On







Volume Up



Volume Down



■ Checking the Battery Level



Phone Pairing



3 Select SRL-EXT in the list of Bluetooth devices detected.



• For more information on phone pairing, refer to the User's Guide.

Using the Phone

Answer a Call



End a Call




Reject a Call



■ Siri and Google Assistant

Activate the Siri or Google Assistant Installed on Your Phone

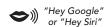







Music Control

Play/Pause



Track Forward



Track Backward



■ Mesh IntercomTM

Open Mesh™: communication within the same channel. **Group Mesh™**: communication within the same private group.

• For more information on **Mesh Intercom**, refer to the User's Guide.

Mesh Intercom On



Mesh Intercom Off



Note: When **Mesh Intercom** is on, the **SRL-EXT** will automatically connect to nearby **SRL-EXT** users and the headset will be in **Open Mesh (default: channel 1) initially**.

Open Mesh

Channel Setting (Default: channel 1) in Open Mesh

① Enter into the Channel Setting.



2 Navigate between channels.

$$(1 \rightarrow 2 \rightarrow \bullet \bullet \bullet \rightarrow 8 \rightarrow 9 \rightarrow Exit \rightarrow 1 \rightarrow \bullet \bullet \bullet)$$



3 Save the channel.



Note: You can use the **SENA MOTORCYCLES App** to change the channel.

■ Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each headset

1) Creating a Group Mesh

Creating a **Group Mesh** requires two or more Open Mesh users.



① Users (You, B, and C) enter into Mesh Grouping to create a Group Mesh.



When Mesh Grouping is completed, the users (You, B and C) will hear a voice prompt on their headsets as Open Mesh switches to Group Mesh.










"Group Mesh"

2) Joining an Existing Group Mesh

One of the current users in an Existing Group Mesh can allow new users (one or more) in Open Mesh to join the Existing Group Mesh.

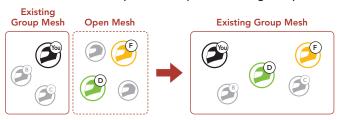

① One (You) of the current users in the Existing Group Mesh and new users (D and F) in Open Mesh enter into Mesh Grouping to join the Existing Group Mesh.



When Mesh Grouping is completed, the new users (D and F) will hear a voice prompt on their headsets as Open Mesh switches to Group Mesh.





■ Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.



Reset Mesh

If the headset in an **Open Mesh** or **Group Mesh** resets the **Mesh**, it will automatically return to **Open Mesh (default: channel 1)**.



■ Bluetooth Intercom

Up to three other people can be paired with the headset for Bluetooth intercom conversations.



Intercom Pairing

There are two ways to pair the headset.

Using the Smart Intercom Pairing (SIP)

SIP allows you to quickly pair with your friends for intercom communication by scanning the QR code on the SENA MOTORCYCLES App without remembering the button operation.

- ① Pair the mobile phone with the headset.
- ② Open the SENA MOTORCYCLES App and tap (Smart Intercom Pairing Menu).
- 3 Scan the QR code displayed on your friend (B)'s mobile phone.
 - Your friend (B) can display the QR code on the mobile phone by tapping → QR code (₽) on the SENA MOTORCYCLES App.



- Tap Save and check that your friend (B) is paired with you (A) correctly.
- ⑤ Tap Scan (⑥) and repeat steps 3-4 to pair with Intercom Friends (C) and (D).

Note: The **Smart Intercom Pairing (SIP)** is not compatible with Sena products that use **Bluetooth 3.0** or **below**.

Using the Button



① Users (You, B) enter into Intercom Pairing.



3 Repeat the steps above to pair with other headsets (C and D).

■ Last-Come, First-Served

If the headset has multiple paired headsets for intercom conversations, the last paired headset is set as the **First Intercom Friend**.



■ Two-way Intercom

Start/End Conversation with the First Intercom Friend D



Start/End Conversation with the Second Intercom Friend C



Start/End Conversation with the Third Intercom Friend B



■ FM Radio

FM Radio On/Off



Start/Stop Scanning



Seek Forward



Seek Backward



Navigating Preset Stations



Note: You can also save the current station from the $\bf SENA$ MOTORCYCLES $\bf App.$

■ Configuration Menu

Accessing the Configuration Menu







"Configuration menu"

Navigating Between Menu Options












Execute Menu Options





Troubleshooting

Fault Reset

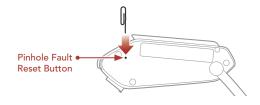


Note: Fault Reset will not restore the headset to factory default settings.

Factory Reset



Quick Reference

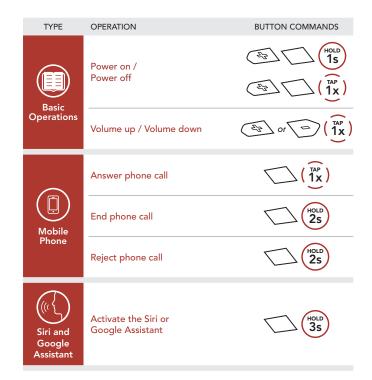

TYPE	OPERATION	BUTTON CO	OMMANDS
Mesh Intercom™	Mesh Intercom on/off	D	$(\widehat{\underbrace{1x}})$
	Channel setting	D	$(\widehat{\underline{2x}})$
	Mesh Grouping	D	HOLD 5s
	Reset Mesh	D	HOLD 8s
	Enable/Disable Mic	D	1s
(((o))) Intercom	Intercom pairing		HOLD 5s
	Start/End intercom		$(\underbrace{1x}^{\text{TAP}})$
Music	Play/Pause music		HOLD 1s
	Track forward	(1 2 2 1	1s
	Track backward		HOLD 1s

TYPE	OPERATION	BUTTON COMMANDS
FM Radio	FM radio on/off	HOLD 1s
	Select preset	HOLD 1s
	Seek forward/backward	$rac{1}{2x}$ or $rac{1}{2x}$
	Scan up FM band/ stop scanning	HOLD 1s