

TELAIETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER  
 SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES - SPÉCIAL SÉTTENTRÄGER FÜR WECHTASCHEN  
 PORTA ALFORJAS TUBULAR LATERAL

# HONDA XL700V '08 TRANSALP

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCCIONES DE MONTAJE - BAUANLEITUNG - INSTRUCIONES DE MONTAJE

**1**

**SUPPORTO**  
 SUPPORT  
 SUPPORT  
 HALTERUNG  
 SOPORTE

**Q.TY n.2(10x-5x)**

**2**


**PONTE POSTERIORE**  
 REAR BRIDGE  
 PONT POSTÉRIEUR  
 VERBRIJUNGSROER  
 PUENTE TRASERO

**Q.TY n.1**

**3**

**VITE TEF M6x25mm**  
 SCREW M6x25mm  
 VIS M6x25mm  
 SCHRAUBE M6x25mm  
 TORNILLO M6x25mm


**Q.TY n.2**



**4**

**VITE TEF M6x16mm**  
 SCREW M6x16mm  
 VIS M6x16mm  
 SCHRAUBE M6x16mm  
 TORNILLO M6x16mm


**Q.TY n.2**



**5**

**VITE TEF M8x50mm**  
 SCREW M8x50mm  
 VIS M8x50mm  
 SCHRAUBE M8x50mm  
 TORNILLO M8x50mm


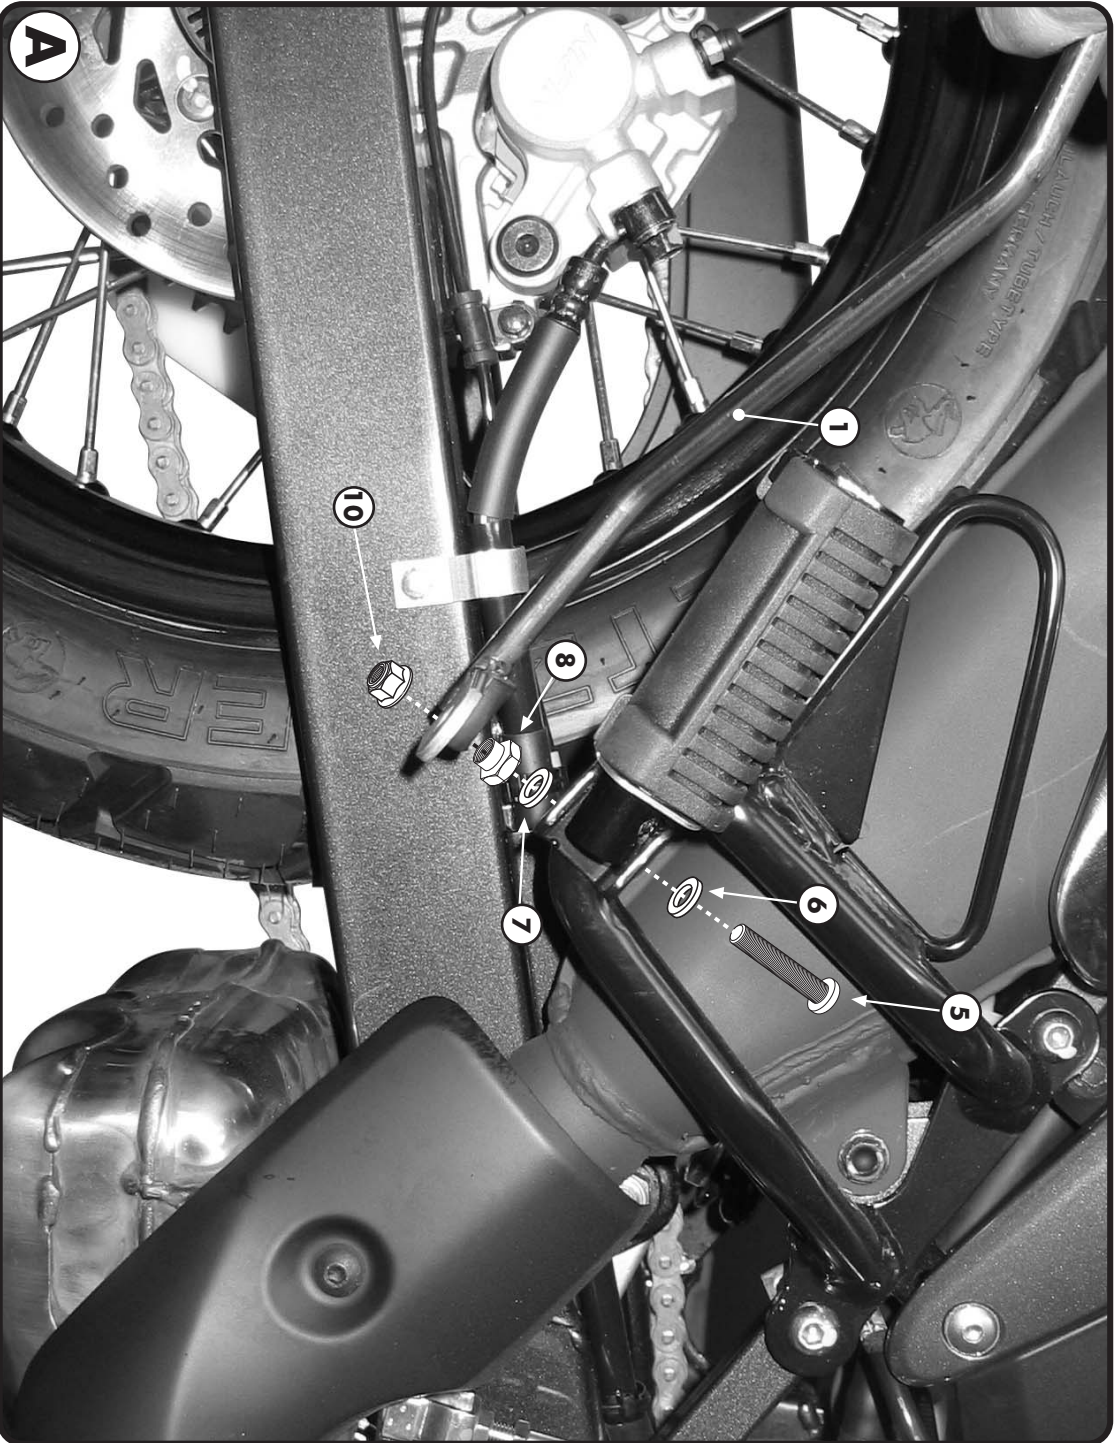
**Q.TY n.2**



**6**

**RONDELLA Ø8x14mm**  
 WASHER Ø8x14mm  
 RONDELLE Ø8x14mm  
 SCHEIBE Ø8x14mm  
 ARANDELA Ø8x14mm

**Q.TY n.2**


T221 - TK221


TELAJETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER  
SUPPORT TUBULAIRE POUR SACSCHES CAVALIERS - SPEZIAL SEITENTRÄGER FÜR WICHTASCHEN  
PORTA ALFORJAS TUBULAR LATERAL


# HONDA XL700V '08 TRANSALP


ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE



**7**  **RONDELLA Ø8mm**  
WAŠER Ø8mm  
RONDELLE Ø8mm  
SCHEIBE Ø8mm  
ARANDELA Ø8mm  
**Q.TY n.2**

**8**  **DADO SPECIALE**  
WASER  
BOLT  
ECROU  
MUTTER  
TUERCA  
**Q.TY n.2**

**9**  **DADO A.B. M6**  
WASER  
BOLT M6  
ECROU M6  
MUTTER M6  
TUERCA M6  
**Q.TY n.2**

**10**  **DADO A.B. M8**  
WASER  
BOLT M8  
ECROU M8  
MUTTER M8  
TUERCA M8  
**Q.TY n.2**

