

PIASTRA SPECIFICA - SPECIFIC PLATE
 PLATINE SPECIFIQUE - SPECIFISCHE PLATTE - PARRILLA ESPECIFICA
BMW F800GS 2008


ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE




SUPPORIO
 SUPPORT
 SUPPORT
 HAFTERUNG
 SOPORTE
Q.TY n.1



VITE TEF M8x60mm
 SCREW M8x60mm
 VIS M8x60mm
 SCHRAUBE M8x60mm
 TORNILLO M8x60mm
Q.TY n.2

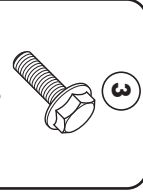


VITE TEF M8x55mm
 SCREW M8x55mm
 VIS M8x55mm
 SCHRAUBE M8x55mm
 TORNILLO M8x55mm
Q.TY n.2

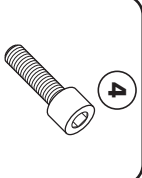


VITE TCEI M6x35mm
 SCREW M6x35mm
 VIS M6x35mm
 SCHRAUBE M6x35mm
 TORNILLO M6x35mm
Q.TY n.4




RONDELLA Ø6mm
 WASHER Ø6mm
 RONDELLE Ø6mm
 SCHEIBE Ø6mm
 ARANDELA Ø6mm
Q.TY n.4

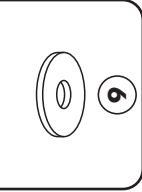


RONDELLA Ø6x20mm
 WASHER Ø6x20mm
 RONDELLE Ø6x20mm
 SCHEIBE Ø6x20mm
 ARANDELA Ø6x20mm
Q.TY n.4

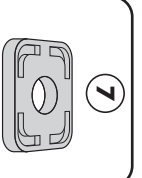


GOMMINO
 RUBBER WASHER
 CAOUTCHOUC
 GUMMI
 GOMA
Q.TY n.4

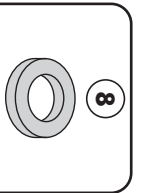


RONDELLA IN GOMMA
 RUBBER WASHER
 RONDELLE EN GOMME
 GUMMISCHIBE
 ARANDELA DE GOMA
Q.TY n.4

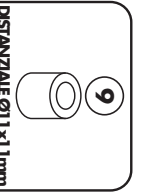


DISTANZIALE Ø11 x11mm
 SPACER
 ENTRETOISE
 DISTANZBLECK
 DSANZADOR
Q.TY n.4

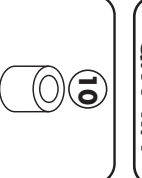


DISTANZIALE Ø16x32mm
 SPACER
 ENTRETOISE
 DISTANZBLECK
 DSANZADOR
Q.TY n.2

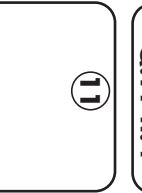

PIASTRA MONKEY
 Z6623M
 PLATE
 PLATINE
 PLATTE
 PARRILLA
Q.TY n.1

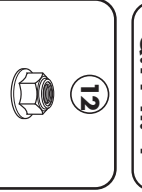

DADO A.B. M6
 RINGNUT
 BOUTON M6
 ECKSCHRAUBE M6
 TUERCA M6
Q.TY n.4

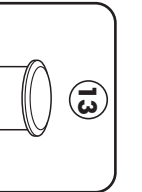

COPRIFORO
 Z621
 BOLT CAP
 STOPLOCK
 TAPA
 AGUJERO
Q.TY n.6

