




**art. PL 703 GUZZI**  
**CALIFORNIA III 1100**

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE

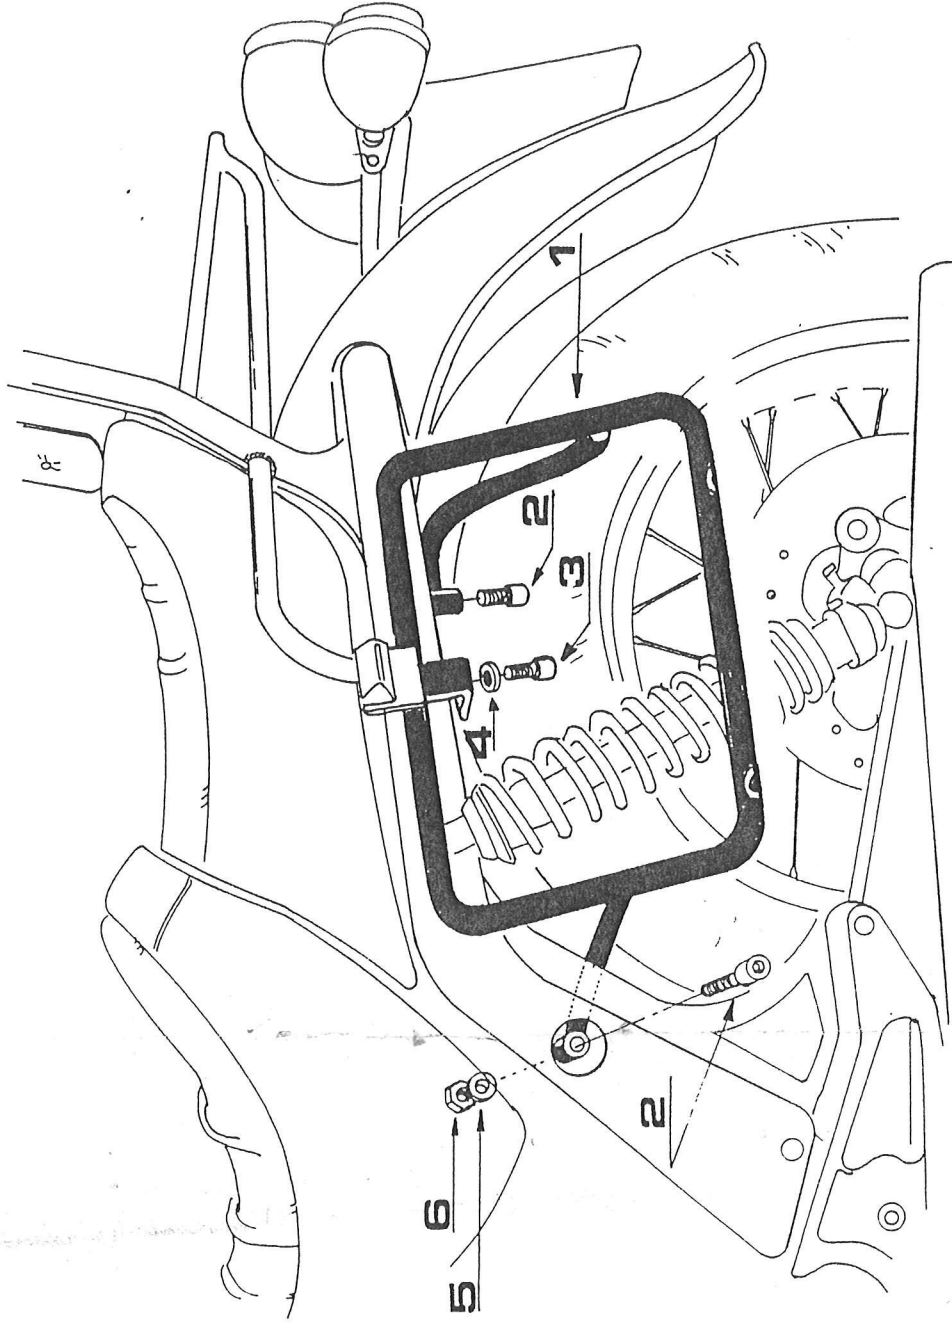

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT)	QUANTITA' (QUANTITY) (QUANTITE)
1	SUPPORTO LATERALE SIDE SUPPORT SUPPORT LATERAL	2
2	VITE TCEI M 8 X 35 SVREW M 8 X 35 VIS M 8 X 35	4
3	VITE ORIGINALE ORIGINAL SCREW VIS ORIGINAL	-
4	RONDELLA ORIGINALE ORIGINAL WASHER RONDELLE ORIGINAL	-
5	RONDELLA Ø 8 WASHER Ø 8 RONDELLE Ø 8	2
6	DADO M 8 NUT M 8 ECROU M 8	2