

PIASTRA SPECIFICA - SPECIFIC PLATE
 PLATINE SPECIFIQUE - SPEZIFISCHE PLATTE - PLETINA ESPECÍFICA

HONDA XL1000V '99/'02 VARADERO


ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE



1

PIASTRA
 PLATE
 PLAQUE

Q.TY n.1



2

VITE TCEI M 8 X 25
 SCREW M 8 X 25
 VIS M 8 X 25

Q.TY n.4



3

TAPPO COPRIFORO
 COVER HOLE CAP
 BOUCHON COUVRE
 TROUE

Q.TY n.6



4

RONDELLA Ø 8 X 14
 WASHER Ø 8 X 14
 RONDELLE Ø 8 X 14

Q.TY n.4




5

DADO M 8
 AUTOBLOCCANTE
 ECROU M 8
 NUT M 8

Q.TY n.4

B

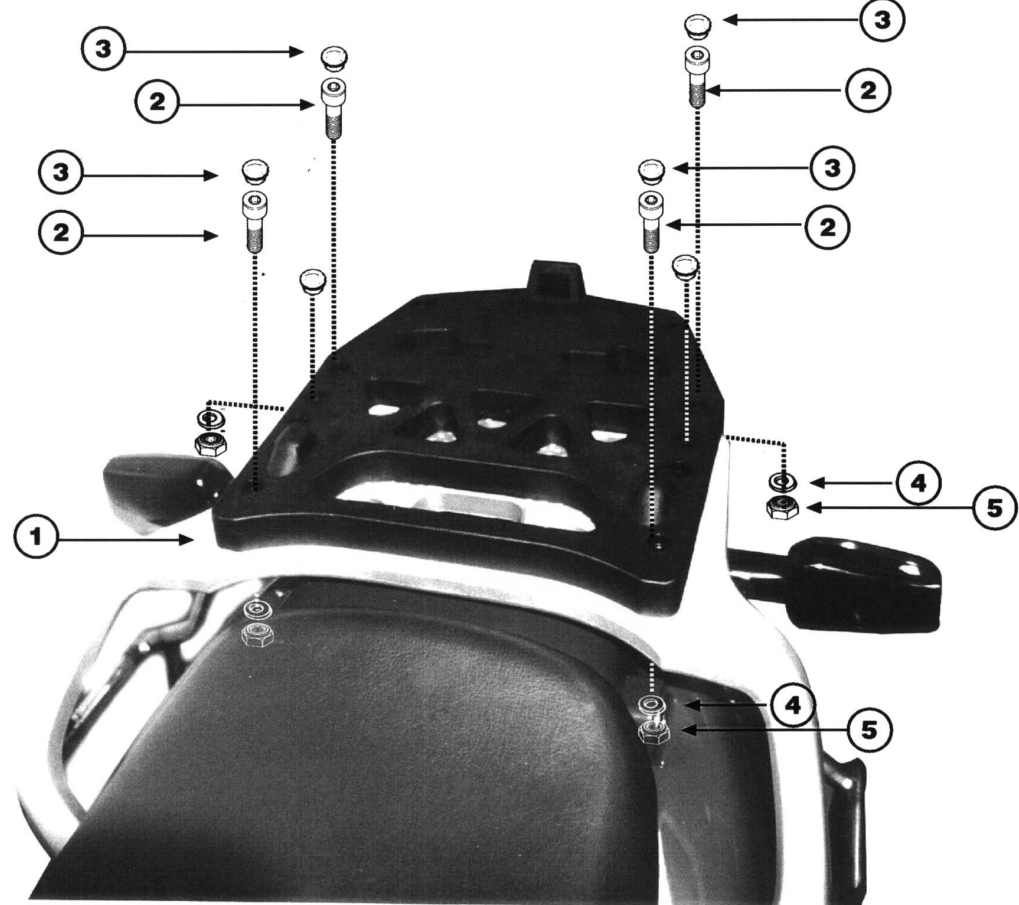

A

ATTENZIONE:
 TOGLIERE I TAPPI ORIGINALI
 SOPRA IL PORTAPACCHI.

WARNING:
 TAKE OFF THE ORIGINAL CAPS
 ON THE LUGGAGE CARRIER

ATTENTION:
 ENLEVER LE BOUCHONS ORIGINALS SUR
 LE PORTE-PAQUETS D'ORIGINE.

