

PORTAVALIGIE LATERALE SPECIFICO - SPECIFIC TUBULAR SIDE-CASE HOLDER  
 PORTE-VALISES LATÉRAUX SPÉCIFIQUE - SPEZIFISCHES STAHLROHR-SEITENTRÄGER  
 PORTA-EQUIPAJE LATERAL ESPECIFICO

# HONDA CB900F 2002 HORNET

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - ISTRUCCIONES DE MONTAJE

**1**

**PL**

**Q.TY n. 2 dx-sx**

**2**

**PONTE POSTERIORE**  
 REAR BRIDGE  
 PONT POSTERIEURE  
 BRÜCKE  
 PUENTE POSTERIOR

**Q.TY n. 1**

**3**

**VITE TBEI M 8X55**  
 SCREW M 8X55  
 VIS M 8X55  
 SCHRAUBE M 8X55  
 TORNILLO M8X55

**Q.TY n. 1**

**4**

**VITE TBEI M 6X55**  
 SCREW M 6X55  
 VIS M 6X55  
 SCHRAUBE M 6X55  
 TORNILLO M6X55

**Q.TY n. 1**

**5**

**VITE TCEI M 8X30**  
 SCREW M 8X30  
 VIS M 8X30  
 SCHRAUBE M 8X30  
 TORNILLO M 8X30

**Q.TY n. 2**

**6**

**VITE TCEI M 6X25**  
 SCREW M 6X25  
 VIS M 6X25  
 SCHRAUBE M 6X25  
 TORNILLO M 6X25

**Q.TY n. 2**

**7**

**RONDELLA Ø6**  
 WASHER Ø6  
 RONDELLE Ø6  
 SCHEIBE Ø6  
 ARANDELA Ø6

**Q.TY n. 3**

**8**

**RONDELLA Ø6X18**  
 WASHER Ø6X18  
 RONDELLE Ø6X18  
 SCHEIBE Ø6X18  
 ARANDELA Ø6X18

**Q.TY n. 2**

**9**

**RONDELLA Ø8X14**  
 WASHER Ø8X14  
 RONDELLE Ø8X14  
 SCHEIBE Ø8X14  
 ARANDELA Ø8X14

**Q.TY n. 1**

**10**



**RONDELLA Ø8**  
 WASHER Ø8  
 RONDELLE Ø8  
 SCHEIBE Ø8  
 ARANDELA Ø8

**Q.TY n. 2**

**11**

**RONDELLA Ø24X2  
 foro Ø 12,5 nera**  
 BLACK WASHER  
 RONDELLE NOIRE  
 SCHEIBE SCHWARTZ  
 ARANDELA NEGRA

**Q.TY n. 4**

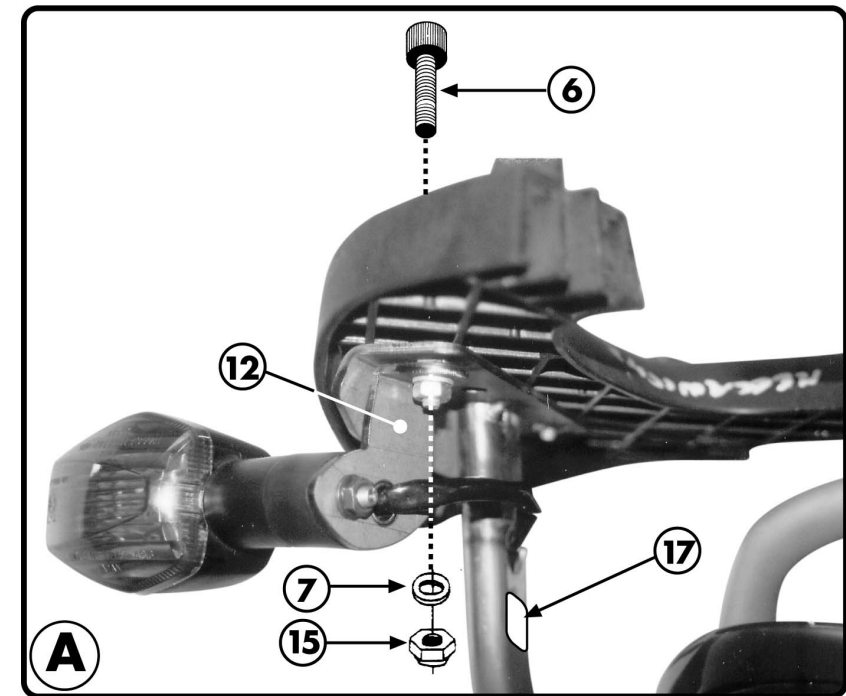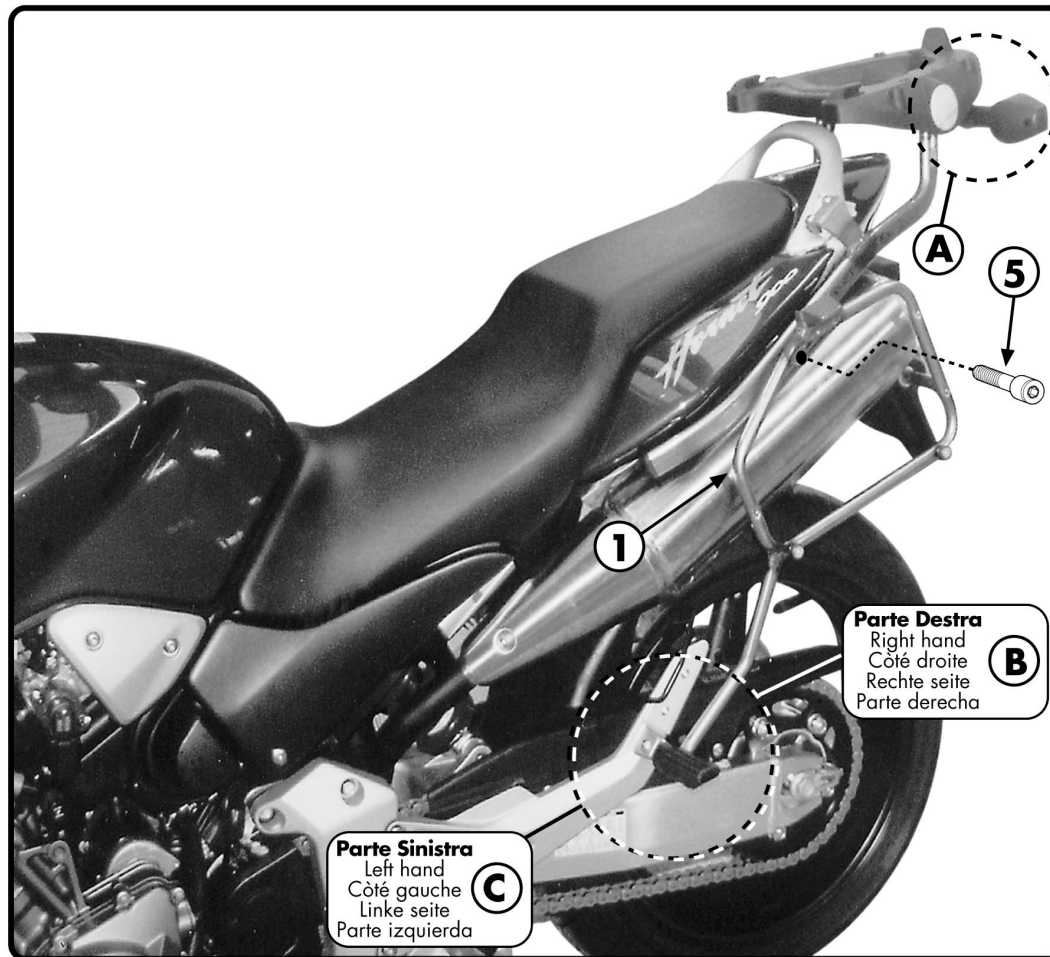

PORTAVALIGIE LATERALE SPECIFICO - SPECIFIC TUBULAR SIDE-CASE HOLDER  
 PORTE-VALISES LATÉRAUX SPÉCIFIQUE - SPEZIFISCHES STAHLROHR-SEITENTRÄGER  
 PORTA-EQUIPAJE LATERAL ESPECÍFICO

# HONDA CB900F 2002

## HORNET

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - ISTRUCCIONES DE MONTAJE

**12**  
  
**GL 626**  
 SUPPORTO FRECCIA  
 BLINKER SUPPORT  
 SUPPORT CLIGNOTANT  
 BLINCKER LAGER  
 SOPORTE INTERMITENTE

**13**  
  
**DADO M8**  
 BOLT M8  
 ECROU M8  
 MUTTER M8  
 TUERCA M8

**14**  
  
**DADO A.B. M8 ribass.**  
 BOLT M8 low  
 ECROU M8 baisse  
 MUTTER M8  
 TUERCA M8 rebajada

**15**  
  
**DADO A.B. M6 ribass.**  
 BOLT M6 low  
 ECROU M6 baisse  
 MUTTER M6  
 TUERCA M6 rebajada

**16**  
  
**V 258**  
**DADO M6 speciale**  
 SPECIAL BOLT M6  
 ECROU M6 speciale  
 MUTTER M6 special  
 TUERCA M6 especial

**17**  
  
**V 352**  
**FERMACAVO ADESIVO**  
 CABLE STOPPER  
 FERMECABLE  
 STOPKABEL  
 AGARRA CABLE

**18**  
  
**VITE TCEI M5x20**  
 SCREW M5x20  
 VIS M5x20  
 SCHRAUBE M5x20  
 TORNILLO M5x20

